

DBNZ Tech Tip of The Week


E-Learning

The DeBeer E-Learning Program is a suite of online training courses developed for Bodyshop Professionals to enhance their knowledge and understanding of refinishing techniques using DeBeer Refinish coatings systems.



Accelerate your productivity with the new DeBeer E-Learning Platform

To Learn more or register scan the QR code

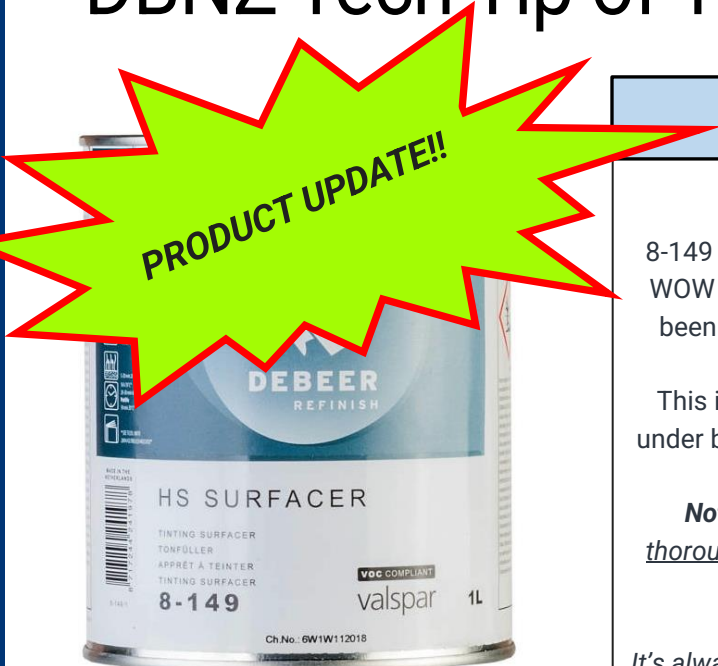

Preferred WOW Primer/Undercoat/Sealer for 500 series Basecoat.

Note: not compatible as a **WOW** undercoat for 900+ series Waterbase Basecoat.

8-149

Product Update

8-149 when mixed with 1-204 clearcoat in WOW Transparent Sealer mode has now been approved to be applied directly to **unsanded e-coat**.

This is a great time saver when coating under bonnets, door jams, insides of doors etc.

Note: Bare e-coat surfaces must be thoroughly cleaned and de-greased before application.

It's always recommended that leading e-coat exterior surfaces which may be subject to stone chipping should be scotched or lightly abraded first.

To create a **WOW Transparent Sealer**, mix equal parts (1:1) of 8-149 with 1-204 clearcoat, then catalyse that mix at a ratio of 3:1 with MS Hardener + 20% reducer.

1. Mix 8-149 with 1-204 clearcoat at a ratio of 1:1

2. Now mix with MS hardener at 3:1

3. Add reducer

WOW Transparent Sealer

MIXING RATIO



8-149	HARDENERS		THINNERS	
1:1	MM 2000 - 2099	3:1	MS Hardener	20 % Uni Thinner
1:1	MM 2000 - 2099	3:1	HS Hardener	20 % Uni Thinner
1:1	1-204	3:1	MS Hardener	20 % Uni Thinner

For further information refer to the product TDS or contact your local DeBeer Representative